

Vehicle Feature Tips

Many of the Tips presented below are covered in greater detail in the Owner's Manual, Multimedia System Manuals, Features and Functions Guide, and Quick-Start Guide hangtag supplied with your new vehicle.

Voice Recognition¹ and Bluetooth^{®2}

Using Voice Recognition

Improve Bluetooth® Voice Recognition (VR) performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or singlesyllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home").
- Avoid using special characters, emojis, and hyphenated names (@, &, #, /, -, *, +, etc.).
- Avoid using acronyms ("Emergency" vs. "ICE" or "In Case of Emergency") or words with all capital letters.
- Spell words completely; system will not recognize abbreviations ("Doctor Smith" vs. "Dr. Smith").
- Always wait for the beep before speaking any commands.
- When using VR to place a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly.
- Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with VR accuracy.
- Your VR system may have difficulty understanding some accents or uncommon names.
- Press the talk button and say "Help" to get a list of available commands.

Pairing or Connecting Your Phone with Bluetooth®

- Select "Device Connections" in the infotainment display¹
 or "Call" button on the steering wheel to begin the pairing
 process if no phone has previously been paired.
- During the pairing process, please make sure you accept all requests for phonebook download and future autoconnection on your phone.
- To pair a second phone or subsequent phones, reference the manuals and guides supplied with your Rio as steps vary by infotainment system.

- If you experience any issues with auto-connection, try the following:
 - Reboot your phone (turn the phone off and then on).
 - Update the phone operating system to the most recently released version.
 - Delete the phone from the list of Bluetooth® devices on the infotainment system display and delete Kia device from the list of Bluetooth® devices on your phone, and re-pair.
 - Ensure the phone has the Bluetooth® feature activated.
- If some contacts are not downloading to the infotainment system display, check to confirm that the contact has been entered correctly and that it has been stored under the categories (HOME, MOBILE, WORK, iPhone®3) that are supported by the infotainment system display. Some contact categories (MAIN, PAGER, OTHER) may not be supported. If the number of contacts exceeds the maximum number allowed on the infotainment system display, contacts will be partially downloaded. Ensure that only the "phone contact list" is selected for contact download on your phone (not social media or email contact lists as these contacts may not download to the infotainment system display).
- Phone operating systems change frequently and some phones may have varying compatibility levels with the Bluetooth® system. For any questions regarding the features of your vehicle, please contact your preferred Kia dealer or contact Kia Consumer Assistance at 1-800-333-4542.

Other Bluetooth® Tips

- Bluetooth® reception is affected by carrier coverage and is dependent on the phone.
- If streaming audio through Bluetooth® from a device, ensure the listening volume on the device is turned up.

Smartphone Connectivity¹



Apple CarPlay®3

Your vehicle offers you command of your compatible iPhone® when you connect through Apple CarPlay® on your infotainment system display. This will enable you to make calls, send hands-free texts, access many of your favorite apps and music, and get navigation help with Siri® voice control.

To connect Apple CarPlay, visit https://youtu.be/98TNWMOQfdU



Android Auto™

Your vehicle allows you to connect to your compatible AndroidTM phone via Android AutoTM on your infotainment system display. Through this feature, you can access music, your phone's dialer, navigation help, and more with an intuitive interface and voice commands. You can even access your phone through your steering wheel controls.

To connect Android Auto, visit https://youtu.be/sTR4KotSOzU

For select models equipped with wireless Apple CarPlay and Android Auto, visit https://youtu.be/oUXXuAZAOEI

Kia Access App*



- Your cellphone and your vehicle have to be connected to a cellular network with a good wireless signal strength
 in order to use Kia Connect⁵ (formerly UVO link). If these conditions are not met, remote commands may not
 execute or may take longer to execute.
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked. Remote Start or Remote Start with Climate Control feature will operate for about 10 minutes.⁶
- The quickest way to obtain an accurate vehicle status is by pressing the refresh icon on your app or customer web portal.
- Activate Remote Start or Remote Start with Climate Control feature a few minutes before you plan to get into the
 vehicle. This will allow vehicle interior to reach a desired temperature.
- In order to help preserve vehicle battery, Kia Connect will not work seven days after the ignition was last turned on. You will need to re-start your vehicle with a key fob in order to use Kia Connect again.

Feature Videos




Satellite Radio Reception*



Satellite radio reception requires a direct line of sight with the satellite transmitting the radio signal. Tunnels, bridges, covered parking, mountainous terrain, tall buildings, heavy foliage, and other obstacles may momentarily interrupt the signal. This is normal operation, and reception may be restored within a few seconds in an open, unobstructed area.

The signal can become weak in some areas that are not covered by the satellite repeater network.

Trunk / Liftgate Operation*7

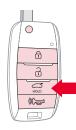

5-Door vehicles:


If the Liftgate Unlock button on the key fob is pressed momentarily when all doors are locked, the liftgate will unlock. While unlocked, the liftgate on the 5-Door vehicles can be opened by pressing the Liftgate Release button under the handle and pulling the liftgate up by the handle.

4-Door vehicles

The trunk can only be opened by using the lever inside the vehicle or holding the trunk button on the key fob. If the trunk button on the key fob is pressed for more than 1 second, the trunk will automatically open.

Note: When necessary, replace the battery with CR2032 model.


Tilt Steering Wheel8

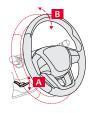

To adjust the Steering Wheel:

- Push down on the Lock-Release Lever A.
- Adjust the Steering Wheel to the desired angle B.
- Pull up the Lock-Release Lever to lock the Steering Wheel in place.

Headlight Switch Operation

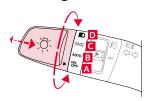


- A OFF position
- B Auto light position
- C Parking light position
- D Headlight position

The light switch has a Headlight, Auto light and a Parking light position. To operate the lights, turn the knob at the end of the control lever to one of the above positions.

When the light switch is in the Parking light position **©**, the tail, license, and instrument panel lights will turn ON.

Front and Rear Windshield Wiper / Washer Controls

FRONT CONTROLS

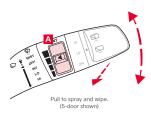

MIST: Single wipe
OFF: Wiper off

INT: Intermittent wipe A

LO: Slow wipe

HI: Fast wipe




Push to spray and wipe



Reminder: The regular use of the windshield wiper blades will ensure better quality and performance.

6-Way Adjustable Driver's Seat®

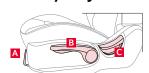

Pull lever A to slide seat forward/backward.

Pull/press lever B up/down one or more times to adjust seat height.

Pull lever C to adjust seat back recline.

Reminders:

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

Please be aware of the distance between the occupant and the airbag when selecting seat position and operation.

Hill-Start Assist Control (HAC)10

HAC can help to prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline. HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

Reminders:

- $\bullet\,$ HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.
- In the event of HAC system malfunction, see an authorized Kia dealer for service.

Driver Attention Warning (DAW)*11


Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. There are three modes:

- Normal Sensitivity: DAW warns the driver of their inattentive driving practices.
- High Sensitivity: DAW warns the driver of their inattentive driving practices faster than Normal mode.
- Off: DAW is deactivated.


If DAW is activated, the DAW information A will appear on the Instrument Cluster LCD when you select the Driving Assist menu in User Settings. A message, "Consider taking a break" B, appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.





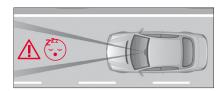


Windshield Defogging – Manual Climate Control

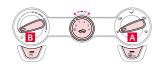

Windshield fogging can be caused by moisture in the air condensing on the cold glass. To help reduce window fogging:

- Keep the inside of the glass as clean as possible.
- Utilize the Defrost Mode which activates the A/C and opens the Fresh Air Vent A.
- Adjust the Temperature Control to the desired temperature B.

Multimedia USB Port, Power Outlet, and USB Charger Port*

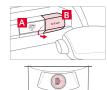

Located at rear of Center Cor


Use the multimedia USB port A to connect USB audio devices and smartphones.

Use the power outlets **B** for mobile phones and other devices designed to operate on a 12V (180W max.) power outlet.

Use the USB charger port Colocated at the rear of the center console to charge devices using a USB port.

Reminder: If USB ports (power outlets) are inoperable in ACC/ON/Start positions, please first inspect the Power Outlet and C/Lighter 20A Fuses. Refer to the vehicle Owner's Manual for location (pages 7-45 through 7-48).

Instrument Cluster User Settings*

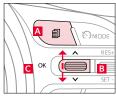

To enter the User Settings mode in the LCD Instrument Cluster modes, press the Mode button A when the vehicle is at a standstill, gear shift in Park, and with the ignition ON, and select User Settings 🌣.

You can navigate the selections on the display by toggling the Move button **B**. Select the item by pressing the OK (Set/Reset) button C.

User Settings Menu

Driving Assist:* Warning Timing*

- Driver Attention Warning*
- Forward Safety
- Lane Safety
- Parking Safety

Door:*

- Automatically Lock
- Automatically Unlock
- Two Press Unlock*
- · Horn Feedback'
- Smart Trunk'

Language:

• To select the language

- One Touch Turn Signal
- Headlight Delay
- High Beam Assist (HBA)*

Convenience:

- Rear Occupant Alert*
- Wiper/Light Display
- Icy Road Warning*

Reset menus in User Settings

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Other Features:

- Fuel Economy Auto Reset
- Speed Unit
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit*

Theme Selection:*

 Select the Theme for the Instrument Cluster

Automatic Climate Control*



- A Auto climate control button
- B Temperature control knob C Front windshield defroster
- System OFF button E Mode selection control
- F Recirculated air button
- G Air conditioning ON/OFF button
- H Fan speed control knob Rear windshield defroster

Defrost Outside Windshield:

- 1. Set Temperature to Hot.
- 2. Press the Front Defrost button.

Defog Inside Windshield:

- 1. Set Fan Speed to highest position.
- 2. Set Temperature to highest position.
- 3. Press the Front Defrost button.

Climate Control Auto Function:

- 1. Press AUTO to select Full Auto Operation the Auto setting automatically controls the airflow modes, fan speeds, air intake, and air conditioning according to the temperature setting selected.
- 2. Set desired Temperature.
- 3. Rotate Passenger Temperature knob to select Dual Temperature Control Operation to control both driver and passenger temperature.

Auto Defogging System (ADS):

Auto Defogging is designed to reduce the fogging up of the inside of the windshield if it senses moisture on the inside of the windshield. The system will automatically change to defrost mode when needed. Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button 🗰 for 3 seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button $\textcircled{\ensuremath{\upphi}}$ for 3 seconds.

Air Flow Modes:

To select Air Flow Modes, press the Mode selection buttons:











Maintaining glass cleanliness is crucial for Climate Control performance, and for preventing a foggy windshield.

Maintaining a clean Climate Control Air Filter is crucial for Climate System performance. Please refer to Owner's Manual for normal scheduled maintenance of 12 months and/or 7,500 miles (Owner's Manual pages 7-24).

Lane Keeping Assist (LKA)*12







LKA is designed to detect the lane markers on the road with a front-view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate WHITE. It will remain WHITE when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate GREEN.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display Lane Departure Warning (LDW)¹³ on the Instrument Cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the Lane Safety/LKA button* is depressed to ON.





When the front-view camera detects the vehicle mov outside of the lane it is travelling in, a vehicle crossing indicator will blink, either on the left or right lane (as shall in both images above).

There are three available modes:


- · Active LKA: Provides more frequent steering inputs than standard LKA.
- LKA: Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane.
- LDW: Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs.

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph.
- LKA recognizes both sides of the lane markers the vehicle is traveling in. · The vehicle is between the lane markers.

Forward Collision-Avoidance Assist (FCA)*12 / Forward Collision Warning (FCW)*12



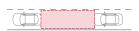

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front-view camera recognition and front radar signals to warn the driver that a collision is imminent, and in certain cases, temporarily apply emergency braking. Initially, FCA provides FCW when it detects a potential collision with a vehicle, pedestrian, or cyclist, by emitting an audible warning and visual alert on the Instrument Cluster.


If the system detects that the collision risk has increased, FCA can automatically apply the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

The FCA/FCW systems will become active when the:

- Engine Start/Stop button is ON.
- Vehicle is traveling faster than 5 mph.
- Electronic Stability Control (ESC) is ON.

This system is only a supplemental system and is not intended to, nor does it, replace the need for extreme care and attention from the driver. The sensing range and objects detectable by the sensor are limited. Refer to the Owner's Manual for detailed information that may affect performance. Common causes for temporary disabled FCA/FCW operation include: heavy snow/rain, direct sunlight, heavy fog, and mud/dirt on the front of the vehicle.

Automatic Gear Shift with Sportmatic® Shifting

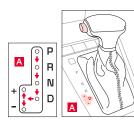

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Manual Mode Upshift


[-]: Manual Mode Downshift

Manual Mode:

To enter Manual mode, move shift lever from D to left gate A.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

Rear View Monitor (RVM)¹³

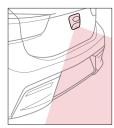


The Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio control unit screen while the vehicle is in Reverse.

The Rear View Monitor activates when the:

- 1. Ignition is ON.
- 2. Gear Shift Lever is in the R (Reverse) position.

Reminder: Always drive carefully and use caution when backing up. The vehicle speed needs to be slower than 6 mph for RVM to operate. Through normal use and after inclement weather, the wide-rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens.

Folding Rear Seatback*14

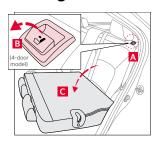

To Fold:

- Ensure the rear seat belt is out of way of the Seatback folding area A (4-door model).
 Insert the metal seat belt tab into the holder A (5-door model).
- Adjust the Front Seatback to the upright position, and lower the Rear Seatback headrest to the lowest position.
- 3. Pull on the Rear Seatback lock release lever **B**, then fold the Seatback forward **C**.

To Unfold:

- 1. Pull the lock release lever **B**, and lift the Seatback backward until it clicks firmly in place.
- Return the rear seat belt to the proper position.

Quick Tips:

- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder (5-door model).
- Always make sure the Seatback is locked in place when unfolded.





Movement that inspires

2023 Rio 5-Door S with Tech Package shown on cover with optional features. And all optional features are available on all trims. Some features may vary, Images or graphics for illustration only. 'If equipped Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Remain attentive to driving and be cautious when using steering wheel-mounted controls while driving. Use of any handheld devices, other equipment, or vehicle systems that take the driver's eyes, attention, and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during the operation of the vehicle. The Bluetooth* word mark and logos are registered trademarks owned by Bluetooth* word mark and logos are registered trademarks owned by Bluetooth Sic, linc. and any use of such marks by Kia is under license. A Bluetooth* enabled cell phone is required to use Bluetooth* wireless technology. Apple for a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google play* for and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply, Android, Android Auto, and Google Play are trademarks of Google LLC or its affiliates. *Purchase/lease of certain 2023 and newer Kia vehicles with Kia Connect (formerly UVC) link) includes a complimentary 1-year subscription starting from new wehicle retail sale/lease date as recorded by the dealeses of the viacy of the kia Connect Privacy Policy (available at owners kia.com/us/en/frivacy-policy.html) and Terms of Service (available at owners. Alicense and a control of the kia Connect features may immediately terminate. Use of Kia Connect services available on your Kia will require a paid subscription at the then current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to chan