

The 2022 Kia Seltos.



Movement that inspires

Vehicle Feature Tips

Many of the Tips presented below are covered in greater detail in the Owner's Manual, Multimedia System Manuals, Features and Functions Guide, and Quick-Start Guide hangtag supplied with your new vehicle.

Voice Recognition¹ and Bluetooth^{®2}

Using Voice Recognition

Improve Bluetooth[®] Voice Recognition (VR) performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home").
- Avoid using special characters, emojis, and hyphenated names (@, &, #, /, -, *, +, etc.).
- Avoid using acronyms ("Emergency" vs. "ICE" or "In Case of Emergency") or words with all capital letters.
- Spell words completely; system will not recognize abbreviations ("Doctor Smith" vs. "Dr. Smith").
- Always wait for the beep before speaking any commands.
- When using VR to place a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly.
- Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with VR accuracy.
- Your VR system may have difficulty understanding some accents or uncommon names.
- Press the talk button and say "Help" to get a list of available commands.

Pairing or Connecting Your Phone with Bluetooth[®]

- Select "Device Connections" in the infotainment display or "Call" button on the steering wheel to begin the pairing process if no phone has previously been paired.
- During the pairing process, please make sure you accept all requests for phonebook download and future auto-connection on your phone.
- To pair a second phone or subsequent phones, reference the manuals and guides supplied with your Seltos as steps vary by infotainment system.

- If you experience any issues with auto-connection, try the following:
 - Reboot your phone (turn the phone off and then on).
 - Update the phone operating system to the most recently released version.
 - Delete the phone from the list of Bluetooth[®] devices on the infotainment system display¹ and delete Kia Connect from the list of Bluetooth[®] devices on your phone, and re-pair.
 - Ensure the phone has the Bluetooth[®] feature activated.
- If some contacts are not downloading to the infotainment system display, check to confirm that the contact has been entered correctly and that it has been stored under the categories (HOME, MOBILE, WORK, iPhone^{®3}) that are supported by the infotainment system display. Some contact categories (MAIN, PAGER, OTHER) may not be supported. If the number of contacts exceeds the maximum number allowed on the infotainment system display, contacts will be partially downloaded. Ensure that only the "phone contact list" is selected for contact download on your phone (not social media or email contact lists as these contacts may not download to the infotainment system display).
- Phone operating systems change frequently and some phones may have varying compatibility levels with the Bluetooth[®] system. For any questions regarding the features of your vehicle, please contact your preferred Kia dealer or contact Kia Consumer Assistance at 1-800-333-4542.

Other Bluetooth[®] Tips

- Bluetooth[®] reception is affected by carrier coverage and is dependent on the phone.
- If streaming audio through Bluetooth[®] from a device, ensure the listening volume on the device is turned up.

Smartphone Connectivity¹



Apple CarPlay^{®3}

Your vehicle offers you effortless command of your compatible iPhone[®] when you connect through Apple CarPlay[®] on your infotainment system display. This will enable you to make calls, send hands-free texts, access many of your favorite apps and music, and get navigation help with Siri[®] voice control.

To connect Apple CarPlay, visit <https://youtu.be/98TNWMOQfdU>



Android Auto^{™4}

Your vehicle allows you to connect to your compatible Android[™] phone via Android Auto[™] on your infotainment system display. Through this feature, you can access music, your phone's dialer, navigation help, and more with an intuitive interface and voice commands. You can even access your phone through your steering wheel controls.

To connect Android Auto, visit <https://youtu.be/sTR4KotSOzU>

For select models equipped with wireless Apple CarPlay and Android Auto, visit <https://youtu.be/oUXXuAZAOEI>

Kia Access App^{*5}




- Your cellphone and your vehicle have to be connected to a cellular network with a good wireless signal strength in order to use Kia Connect (formerly UVO link). If these conditions are not met, remote commands will fail or will take a long time to execute.
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked. Remote Start or Remote Start with Climate Control feature will operate for about 10 minutes.⁶
- The quickest way to obtain an accurate vehicle status is by pressing the refresh icon on your app or customer web portal.
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before you plan to get into the vehicle. This will allow vehicle interior to reach a desired temperature.
- In order to preserve vehicle battery, Kia Connect will not work seven days after the ignition was last turned on. You will need to re-start your vehicle with a key fob in order to use Kia Connect again.

Feature Videos

To view a video on your mobile device, snap this QR Code or visit the listed website:
<https://www.youtube.com/KiaFeatureVideos>




Multimedia USB Port, Power Outlets, and USB Charger Ports

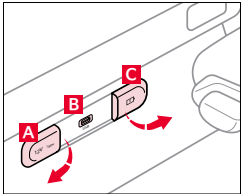


- Power Outlets A:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max.) power outlet.
- Multimedia USB Port B:** Use Multimedia USB port to connect USB audio devices and smartphones.
- USB Charger Port C:** Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger Port.
- Note:** Devices will only charge while the vehicle is in ACC/ON/Start position.

If you encounter difficulty plugging in a compatible USB device, change the orientation of the device (may be upside down). Always use the USB charging cable that has been certified by the device manufacturer. Use of aftermarket cables is NOT recommended as they may impact functionality.

Idle, Stop and Go (ISG) System

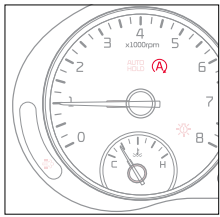


(Cluster B shown)



(Buttons located on left of steering wheel)


- The ISG system is designed to help reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.
- When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the AUTO STOP indicator A on the instrument cluster will illuminate green.
- When the ISG system is on and the vehicle is at a standstill, the engine may not stop and the AUTO STOP indicator A on the instrument cluster will illuminate YELLOW. This indicates the system is functional but not all enabling criteria have been met.
- The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.
- To deactivate the ISG system, press the ISG OFF button A. If you press again, the system will be activated. Please see the Owner's Manual for details.
- If the amber warning lamp is on, the system is functional, but not all enabling criteria has been met.
- If the AUTO STOP indicator is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer.

Remote Start with Key Fob*⁶



- You can start the vehicle using the remote start button A on the smart key.
- To start the vehicle remotely:
- Lock the doors by pressing the door lock button within 32 feet (10 meters) distance from the vehicle.
 - Press the remote start button for over 2 seconds within 4 seconds after locking the doors.
- Press the remote start button once to turn off the vehicle.
- If no further action for operation/driving the vehicle is taken, the vehicle will be turned off 10 minutes after starting the vehicle remotely.

Lane Following Assist (LFA) System*⁷

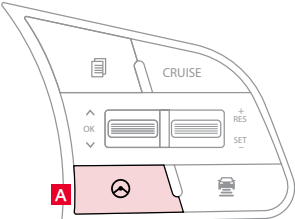

- The LFA system helps detect lane markers on the road with a front view camera at the front windshield, and assists in maintaining the vehicle between lanes.
- LFA Operation**
- When the ENGINE START/STOP button is in the ON or START position, Lane Following Assist can be activated by pressing the button A on the steering wheel.
- Operating Conditions**
- When the system is activated, the indicator on the cluster will illuminate. The color of the indicator will change depending on the condition of the LFA system.
- **Green:** The system is in the enabled state.
 - **White:** The system is in the ready state.

LFA Activation

- After LFA is activated, if the vehicle is within the lane and both lane markers are detected (lane color changes from grey to white) and there is no abrupt steering by the driver, indicator light will change from white to green. This indicates that the LFA system is in the ENABLED state and the steering wheel will be able to be controlled.
- The indicator light changes from green to white when the control is temporarily canceled.
- When the system does not recognize the lane, or depending on the vehicle condition in front (presence of the vehicle, driving status, etc.), the steering wheel is controlled restrictively. When the control of the steering wheel is stopped temporarily, the activation indicator blinks in green and then changes to white.

Steering Assist

If the vehicle is inside the lane with both lanes detected by LFA, and there are not abrupt steering inputs made by the driver, LFA changes into steering assist mode. The indicator light will come on green, and LFA helps the vehicle stay in line by providing steering inputs. When steering inputs are not being provided, the indicator light will flash green and change to white. Once LFA recognizes the lanes, the color of the lane on the screen will change from grey to white.

Warning Message

If you keep your hands off the wheel while driving with LFA in Steering Assist mode, the hands-off warning will be triggered. If the driver keeps their hands off of the wheel even with the hands-off warning on, the steering assist is temporarily deactivated automatically. If you activate the Smart Cruise Control* system with LFA released, the steering assist will re-start.


LFA Malfunction

In the event of an LFA malfunction, you will receive this message in your instrument cluster: "Check Lane Following Assist (LFA) system." If you see this warning, please have your vehicle checked by an authorized Kia dealership. The LFA malfunction message can also appear during adverse road conditions such as rain, puddles, snow, dust, sand, etc.


Warnings:

- The LFA system is designed to help the vehicle stay in its detected lane. It is a supplemental system only and is not a substitute for safe driving. Never rely solely on your LFA system.
- It is the driver's responsibility to operate the steering wheel while driving.
 - Do not turn the steering wheel hastily if the LFA system is activated.

Dual-Clutch Transmission (DCT)*

- Some Seltos vehicles are equipped with a DCT. The DCT gives the driving feel of a manual transmission, yet provides the ease of a fully automatic transmission.
- The following are unique driving tips of the Dual-Clutch Transmission:**
- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be placed in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal, the transmission may overheat, resulting in damage.
 - Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission.
 - A slight time lag may be experienced at takeoff from a standstill during aggressive acceleration.
 - If the clutches are overheating, an amber warning lamp  will be illuminated and a message displays on the instrument cluster. Should this occur, safely pull over and place the vehicle in Park (P) and idle the engine.

Lane Keeping Assist (LKA)⁷

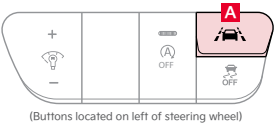

If the LKA system detects that you are moving outside of your lane, the system may give an audible warning and display an LDW (Lane Departure Warning) alert on the instrument cluster. If the vehicle continues to move outside of the lane, LKA can provide steering inputs, trying to prevent the vehicle from moving outside its lane.

To switch between LKA modes (LKA and Lane Departure Warning), go to Vehicle Settings in the navigation unit or in the instrument cluster settings menu.

All systems will operate under the following conditions:


- The vehicle exceeds approximately 40 mph.
- The vehicle is between the lane markers.
- The LKA system recognizes the lane the vehicle is traveling in.

Lane Keeping Assist – Provides an audible warning and can provide steering inputs when the system detects that you are moving outside of your lane.

Lane Departure Warning – Only provides an audible alert and a visible alert on the instrument cluster. The system will not provide steering inputs in this mode.

In addition, there are 2 levels of sensitivity for the audible warning which is accessed in the settings menu: Normal and Late.

Forward Collision-Avoidance Assist (FCA)⁷

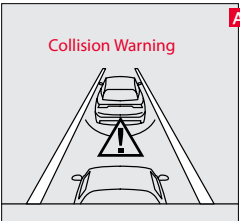


FCA is designed to help alert the driver and, under certain conditions, apply emergency braking when rapidly approaching a vehicle that is slowing down, braking, or stopped. Initially, the FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front by emitting an audible warning and visual alert on the instrument cluster **A**. Adjust the alert settings (Active Assist, Warning Only, Off) in either the instrument cluster or audio settings. FCA is ON by default and can be turned OFF in the Vehicle Settings* in the audio control unit or instrument cluster settings menu.

If the system detects that the collision risk has increased, FCA can automatically apply the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA/FCW will become active when the:

- Engine Start/Stop button is ON.
- Vehicle is traveling faster than 5 mph.
- Electronic Stability Control (ESC) is ON.

Blind-Spot Collision-Avoidance Assist – Rear (BCA-R)^{*7}

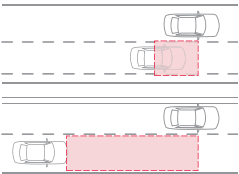

The BCA-R system uses radar sensors in the rear bumper to help alert the driver in certain situations, such as if it detects an approaching vehicle in the driver's blind spot area. The system will activate when the vehicle is traveling faster than 20 mph and will alert the driver if another vehicle is detected by the radar sensor.

To activate the BCA-R system, go to Vehicle Settings* in the audio control unit or instrument cluster. Select Driver Assistance > Blind Spot Safety. Select Active Assist, Warning Only or Off.


To set the initial warning activation time, go to Vehicle Settings in the audio control unit > Driver Assistance > Warning Time. Select the Normal or the Later option.

Active Assist – When Active Assist is selected in the settings, BCA-R may activate the Electronic Stability Control (ESC) and temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle. A warning message may appear on the LCD instrument cluster.

1st-stage alert: When another vehicle is detected within the BCA-R system warning boundary, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)^{*7}


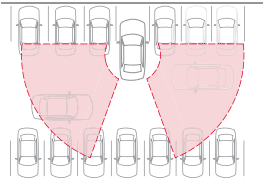


If RCCA detects approaching vehicles from the rear-left or rear-right side of the vehicle, the system will sound an audible warning, the warning indicators on the outside rearview mirrors will illuminate, and a message will appear on the LCD instrument cluster. RCCA may activate the Electronic Stability Control to help avoid an imminent collision. RCCA may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle.


RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse.
- When the vehicle is moving slower than 6 mph.

Smart Cruise Control (SCC) with Stop and Go System^{*7}

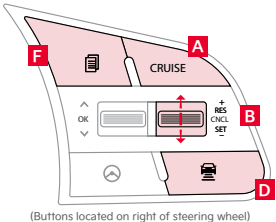

REMINDER: Above are approximate distances based on a 56-mph vehicle speed. The SCC vehicle-to-vehicle distance increments are based on vehicle speed.

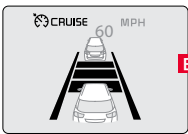

The SCC with Stop and Go system is designed to maintain a speed and predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With SCC on and activated, the vehicle-to-vehicle distance set, and when the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

To set/adjust SCC speed:

- Press the CRUISE button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster.
- Accelerate/decelerate to the desired speed.
- Press (SET-) button **B** down to set speed. The SET indicator light will illuminate. The set speed and vehicle-to-vehicle distance will illuminate on the LCD screen.
- Press (RES+) button **B** up or (SET-) button **B** down to adjust the set speed.

To set the vehicle-to-vehicle distance **C:** Press the SCC button **D** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings.

To cancel SCC operation: Press the CANCEL button **B** or press the brake pedal. The LCD screen will display a message that the SCC operation is canceled.

To turn the SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of SCC: Press the MODE/MENU button **F** on the Steering Wheel. When in User Settings, select Driver Assistance, then SCC Reaction. Then select Slow, Normal or Fast.

All-Wheel Drive (AWD) System*8



When you select AWD LOCK mode (indicator is illuminated) by pressing the AWD LOCK button **A**, the AWD Lock Mode splits the power 50/50 between the front and rear tires for better control when driving on wet pavement, snow-covered roads, and/or on unpaved roads.

- This mode is used for climbing or descending sharp grades, driving on unpaved roads, driving on sandy and muddy roads, etc., to improve traction.
- This mode automatically begins to deactivate at speeds above 38 mph, and is shifted to AWD AUTO mode at speeds above 38 mph. If the vehicle decelerates to speeds below approximately 38 mph, however, the transfer mode is shifted into AWD LOCK mode again.

When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

Occupant Detection System (ODS) / Passenger Airbag Off Indicator



ODS is designed to detect the presence of the front passenger and adjusts or turns off airbag deployment accordingly. Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" indicator will illuminate.

Reminders:

- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.
- Do not place objects in the passenger seat, which may interfere with ODS operation and incorrectly detect a passenger, causing the seat belt reminder notification to activate.


Rear Occupant Alert (ROA) System9



The ROA system can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the instrument cluster stating to "Check rear seats" **A** and a chime will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to Vehicle Settings, select Convenience, then Rear Occupant Alert, and check/uncheck the box to enable/disable by pressing the OK button on the Steering Wheel.

Door Lock Operation

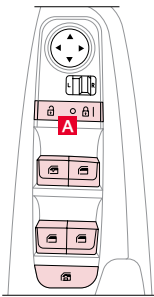

Press **A** to Lock/Unlock All Doors (also locks/unlocks Fuel Door).


Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings* in the LCD Instrument Cluster modes on how to turn Auto Door Unlock ON/OFF.

Note: The door lock function will not operate from the switch or key fob if there is a driver or passenger door open.

Rear Door Locks

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

Liftgate Release Button10

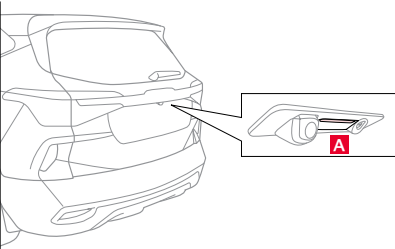

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.

Quick Tip:

The liftgate unlocks automatically when the Smart Key fob* is within close proximity to the vehicle, then can be opened manually.



2022 Seltos SX AWD shown on cover. Images or graphics for illustration only. *If equipped. ¹Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention, and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. ²The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. A Bluetooth® enabled cell phone is required to use Bluetooth® Wireless Technology. ³Apple® CarPlay®, iPhone®, and Siri® are registered trademarks of Apple Inc., registered in the U.S. and other countries. CarPlay runs on your smartphone cellular data service. Normal data rates will apply. ⁴Android Auto™ vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play™ store and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply. Android, Android Auto, and Google Play are trademarks of Google LLC or its affiliates. ⁵Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect (formerly UVO link) includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Kia Connect is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access App is available from the Apple® App Store® or Google Play™ store. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage are required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. ⁶Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google LLC. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owner's Portal for updates on availability. ⁷Kia Connect remote features require a Kia Connect subscription, a compatible smartphone, and a wireless signal with good coverage. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. ⁸Driver-assist technologies are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution. ⁹No system, no matter how advanced, can compensate for all driver errors, driving conditions, accidents, and/or injury. Always drive safely and obey all traffic laws. ¹⁰Rear Occupant Alert is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle. ¹¹Driving with liftgate open may be unlawful and can draw dangerous exhaust fumes into vehicle; if you choose to do so, keep air vents and windows open for ventilation. ¹²Kia received the fewest reported problems among mass market brands in the J.D. Power 2021 U.S. Vehicle Dependability Study, based on 2018 models. See jdpower.com/awards for 2021 details.